

# Operation instruction of test gauge of BA

- 1 Firstly,discharging the cylinder from the air breathing apparatus if cylinder is connected with the whole set of air breathing apparatus.
- 2 Connecting coupling nut of inspection device with cylinder valve of air cylinder and screwing firmiy ( see picture 1).
- 3 Screwing firmly the handwheel of inspecting device at clockwise direction so as to be in the condition of closure(see picture 2).

- 4 Opening the switch of cylinder valve to observe the data of pressure gauge which is equal to the air pressure in the cylinder(see picture 3).
- 5 Closing the switch of cylinder valve and discharging the handwheel of inspection device at the anticlockwise direction(see picture 4).
- 6 Discharging the inspection device .



picture1



picture 2



picture3



picture 4